






Electronic Refrigeration

INSTRUCTIONS



AKV 10-n (n=1-7)




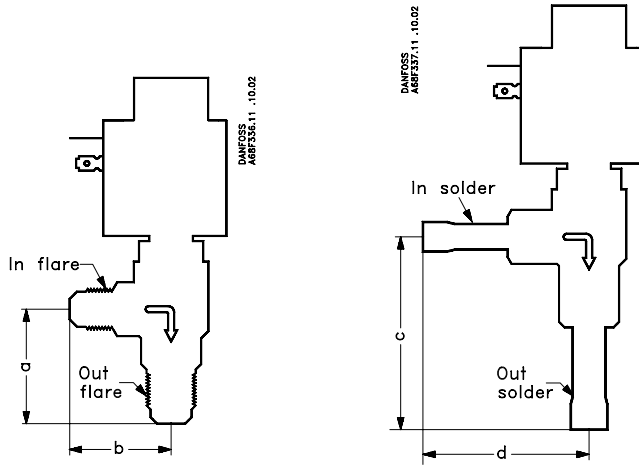


AKV 10 -	1, 2, 3, 4, 5, 6	7
a	48	48
b	45	45
c	75	73
d	67	75
In flare	3/8"	1/2"
Out flare	1/2"	5/8"
In solder	3/8" / 10 mm	1/2" / 12 mm
Out solder	1/2" / 12 mm	5/8" / 16 mm

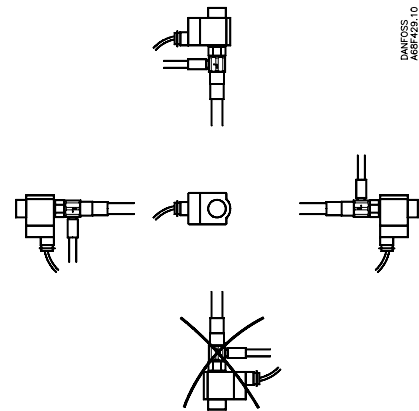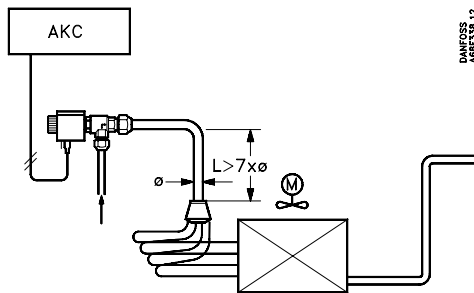

Dyse, Düse, Orifice, Orificio		R 22		R 502		R 134a	
n	Best.nr. Code no. Bestell-Nr. N° de code Núm. de código	kW	TR	kW	TR	kW	TR
1	068F0506	1	0.3	0.7	0.2	0.8	0.2
2	068F0507	1.6	0.5	1.1	0.3	1.3	0.4
3	068F0508	2.5	0.7	1.7	0.5	2.0	0.6
4	068F0509	4.0	1.1	2.8	0.8	3.1	0.9
5	068F0510	6.3	1.8	4.4	1.3	4.9	1.4
6	068F0511	10.0	2.8	7.0	2.0	7.8	2.2
7	068F0512	16.0	4.5	11.1	3.2	12.5	3.6

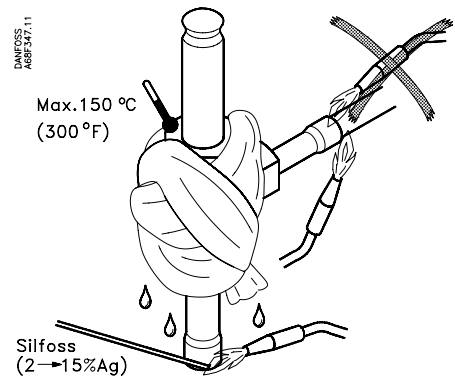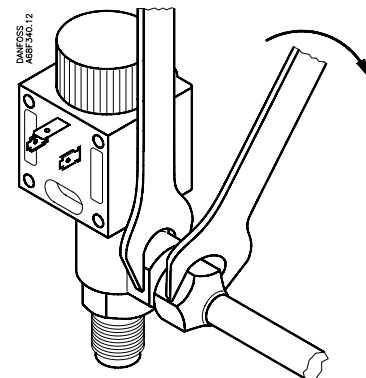

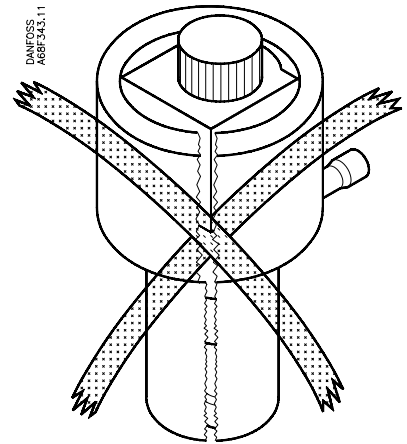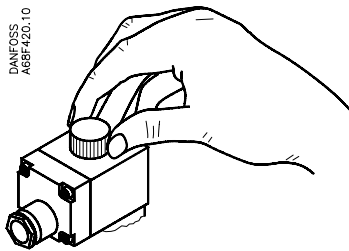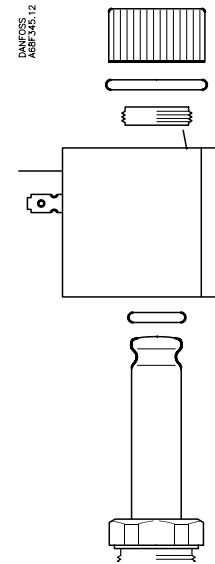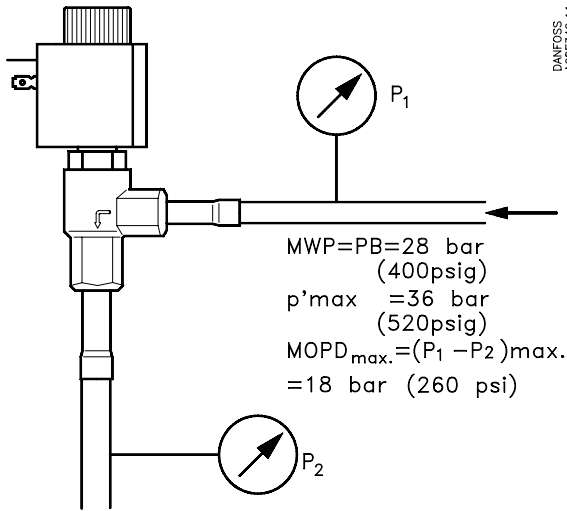

Pakningen skal skiftes, hvis ventilen adskilles

The gasket must be exchanged, if the valve is dismantled

Bei Zerlegung des Ventils muß die Dichtung ausgetauscht werden.

Changer le joint chaque fois que la vanne est démontée

Es preciso cambiar la junta si se desmonta la válvula

