 



Solenoid valves

Type EVRA/ EVM
only used with U_L-GP coil



Conduite coil

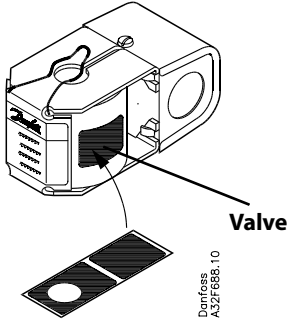


Junction box

Caution

Wiring and fusing (when used) must comply with prevailing local and national wiring codes and ordinances

Mounting position

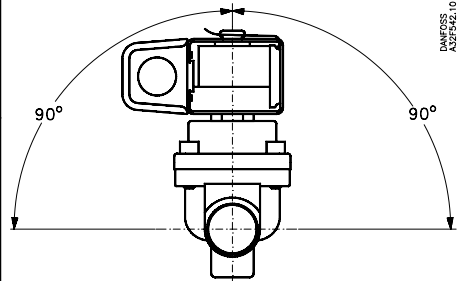

Transformer selection

Coil	Inrush V - Amp.	Holding		
		W	V - Amp.	
208-240 V	50-60 Hz	76	17.5	40
110-120 V	50-60 Hz			
24 V	60 Hz			
120/208 V	50-60 Hz			