




# INSTRUCTIONS

## Spare parts for PKV, PKVS, PKVD

034R9505

### PKV, PKVS

PKV	Nm	ft-lbs
12	10 <sup>+2</sup> <sub>0</sub>	7.5 <sup>+1.5</sup> <sub>0</sub>
15	15 <sup>+2</sup> <sub>0</sub>	11 <sup>+1.5</sup> <sub>0</sub>
20	15 <sup>+2</sup> <sub>0</sub>	11 <sup>+1.5</sup> <sub>0</sub>

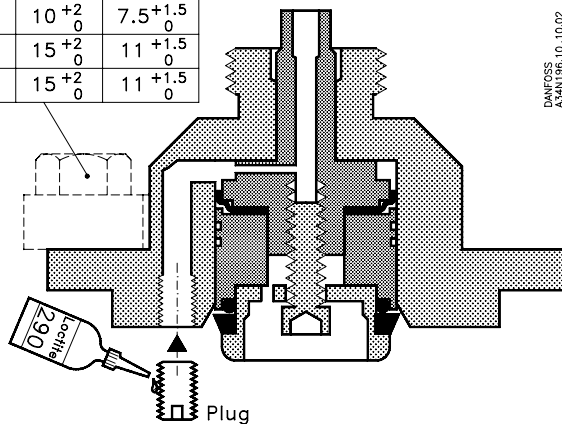


DANFOSS  
A34N196.10.10.02

Piston, cylinder, plug kit	
PKV 12, PKVS 12	<b>034N1143</b>
PKV 15, PKVS 15	<b>034N1144</b>
PKV 20, PKVS 20	<b>034N1145</b>

### PKVD

PKV	Nm	ft-lbs
12	10 <sup>+2</sup> <sub>0</sub>	7.5 <sup>+1.5</sup> <sub>0</sub>
15	15 <sup>+2</sup> <sub>0</sub>	11 <sup>+1.5</sup> <sub>0</sub>
20	15 <sup>+2</sup> <sub>0</sub>	11 <sup>+1.5</sup> <sub>0</sub>

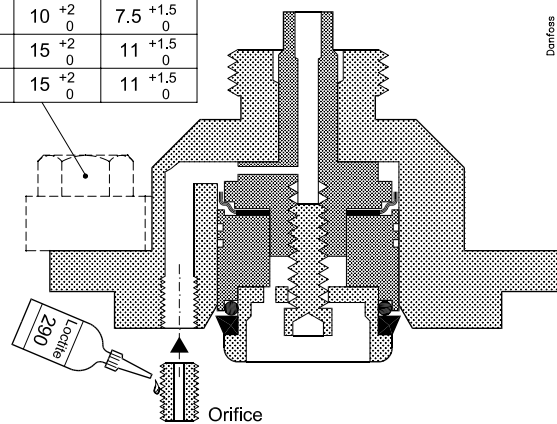

Danfoss  
34N194.15.11.02

Piston, cylinder, plug kit	
PKVD 12	<b>034N1143</b>
PKVD 15	<b>034N1144</b>
PKVD 20	<b>034N1145</b>

034R9505