 





INSTRUCTIONS

WVFX 32-40





003R9744

HFC, HCFC, CFC

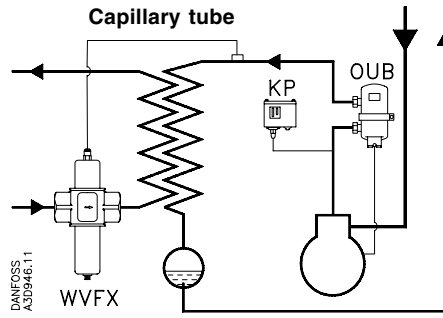

003R9744

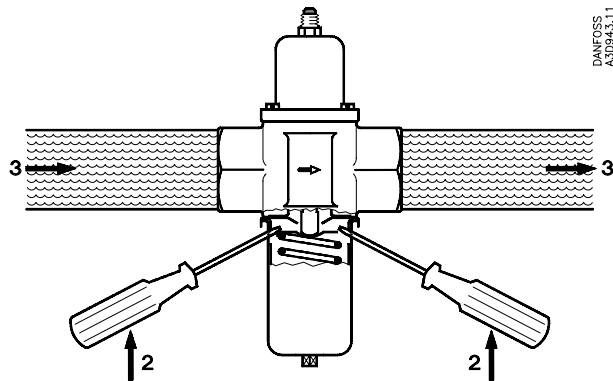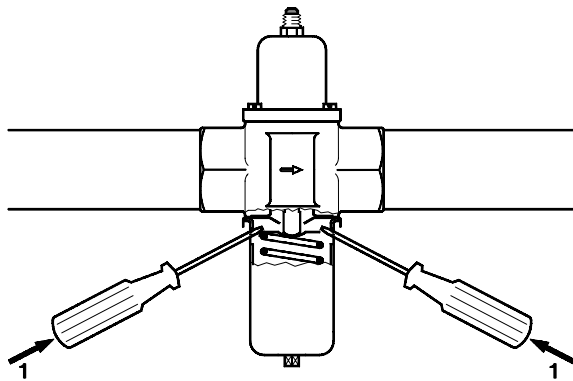

DANFOSS A3D943.1.1


©Danfoss A/S

RI.4C.D2.02 12-2002




INSTRUCTIONS

 WVFX 32-40





003R9744

HFC, HCFC, CFC

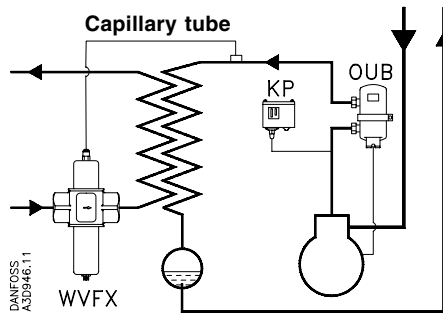

003R9744

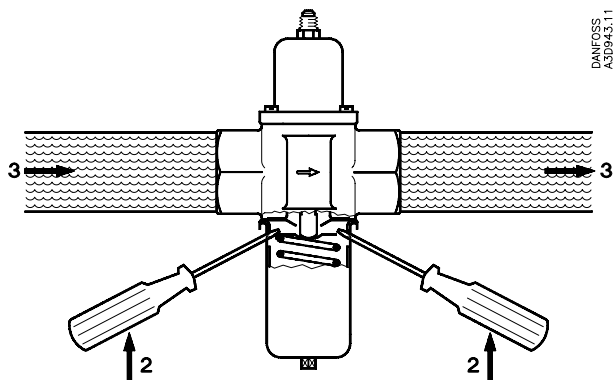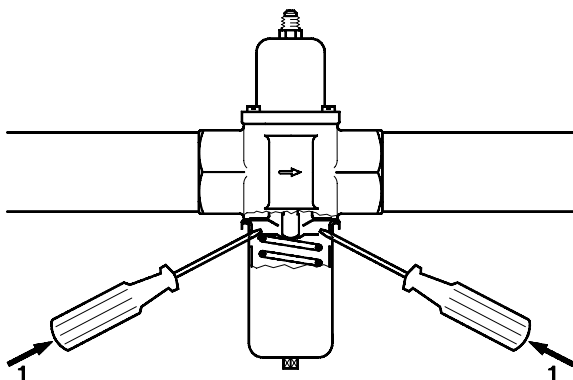


DANFOSS A3D943.1.1


©Danfoss A/S

RI.4C.D2.02 12-2002


DANFOSS
A3B944.12

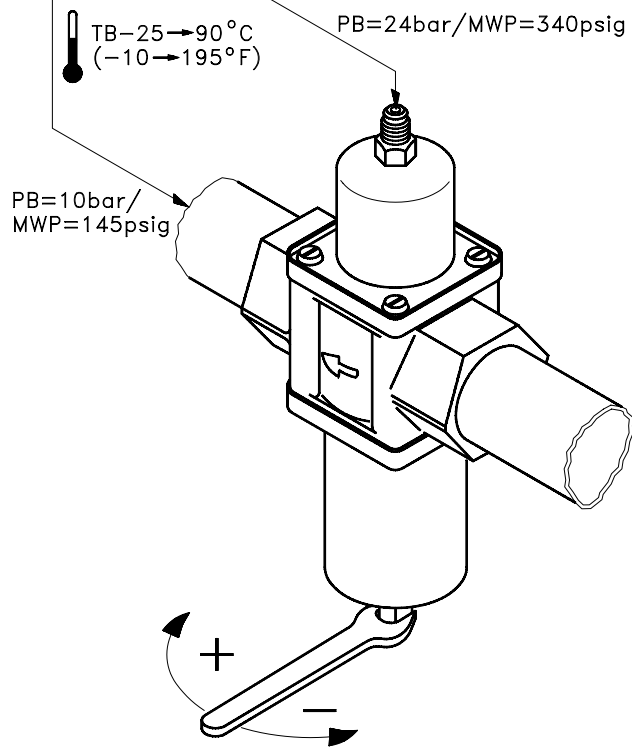

RI.4C.D1.02

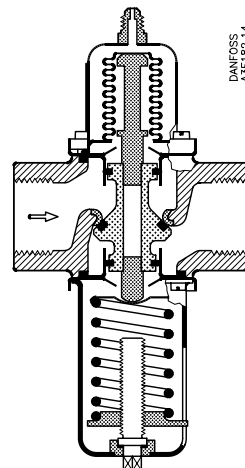


Repair kit:
See Spare Parts Catalogue

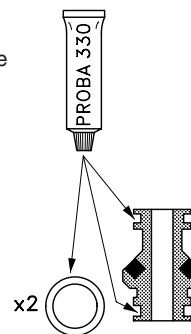


© Danfoss A/S (AC-RCMP,jp) 06-1999


DANFOSS
A3B944.12

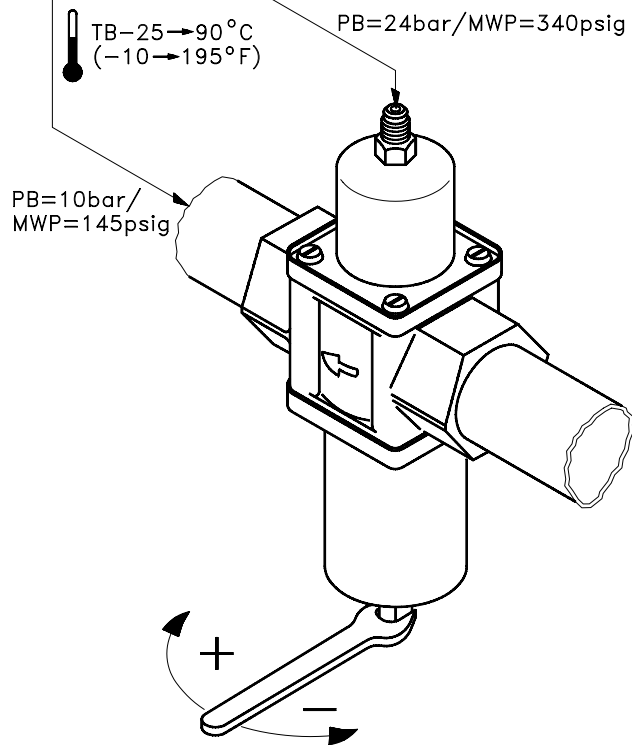

RI.4C.D2.02

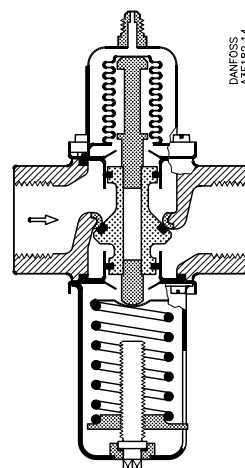

Repair kit:
See Spare Parts Catalogue

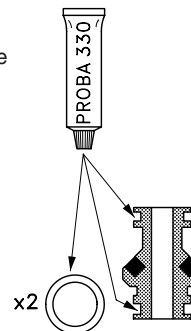

© Danfoss A/S (IC-MC,mr) 12-2002