



Danfoss
A32FE10.11.60

Fig.1, EVR 15 and 20 (NO)

Description	Qty	Code no. Normally Open (NO)
EVR 15 and 18		
Service kit (a.c.)		
Pos. 5 Diaphragm assembly	1	032F0188
14 O-ring	1	
15 Screw	4	
15 Screw	4	
17 Nut	4	
22 NO unit	1	
32 Spacer	1	
45 Rubber gasket	1	
48 Flange gasket	2	
Torx key	1	
EVR 15 and 18		
Seal kit		
Pos. 14 O-ring	1	032F0174
45 Rubber gasket	1	
48 Flange gasket	2	
EVR 15 and 18		
Manual spindle		
Pos. 47 Spindle assembly	1	032F0192
EVR 20 and 22		
Service kit (a.c.)		
Pos. 5 Diaphragm assembly	1	032F0182
14 O-ring	1	
15 Screw	4	
15 Screw	4	
17 Nut	4	
22 NO unit	1	
32 Spacer	1	
45 Rubber gasket	1	
48 Flange gasket	1	
Torx key	1	
EVR 20 and 22		
Seal kit		
Pos. 14 O-ring	1	032F0175
45 Rubber gasket	1	
48 Flange gasket	2	
EVR 20		
Manual spindle		
Pos. 47 Spindle assembly	1	032F0193