




INSTRUCTIONS

Spare parts for PKV, PKVS, PKVD

034R9505

PKV, PKVS

PKV	Nm	ft-lbs
12	10 ⁺² ₀	7.5 ^{+1.5} ₀
15	15 ⁺² ₀	11 ^{+1.5} ₀
20	15 ⁺² ₀	11 ^{+1.5} ₀

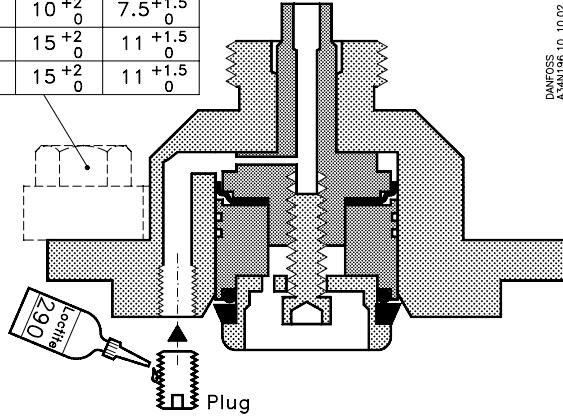


DANFOSS
ACNT196.10.11.02

Piston, cylinder, plug kit	
PKV 12, PKVS 12	034N1143
PKV 15, PKVS 15	034N1144
PKV 20, PKVS 20	034N1145

PKVD

PKV	Nm	ft-lbs
12	10 ⁺² ₀	7.5 ^{+1.5} ₀
15	15 ⁺² ₀	11 ^{+1.5} ₀
20	15 ⁺² ₀	11 ^{+1.5} ₀

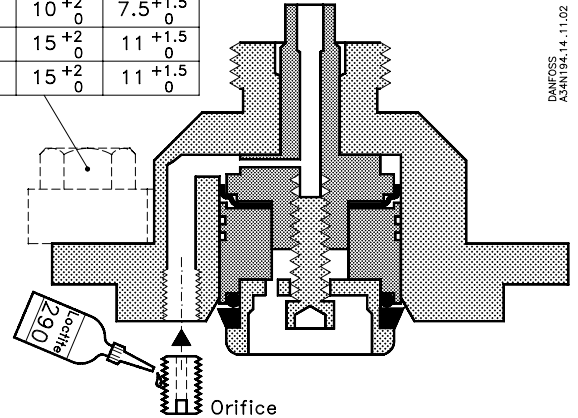

DANFOSS
ACNT194.14.11.02

Piston, cylinder, plug kit	
PKVD 12	034N1143
PKVD 15	034N1144
PKVD 20	034N1145

034R9505