
 
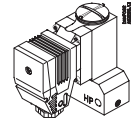


Blokowe presostaty różnicowe MBC 5080 and MBC 5180



Podłączenie elektryczne/ Electrical connection/ Elektrischer Anschluss/ Raccordement électrique

- Uwaga:** Używaj jedynie wtyczek oryginalnych
Attention: Use only the accompanying plug, also when replacing
Achtung: Nur mitgelieferten Stecker verwenden, auch im Austausch
Attention: Utiliser exclusivement la prise fournie, même en cs de remplacement

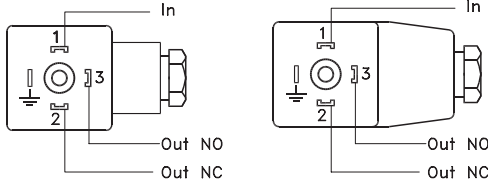

- 1: Input
 2: Normally closed (NC)
 3: Normally open (NO)
 Connected to enclosure of pressure control


DANFOSS
A93Z19.10..11.02

Obciążenie styków
Contact load
Kontaktlastarge de contact


AC 15: 0.5 A, 250 V
 DC 13: 12 W, 125 V

1	Syg. wej. Input Eingang Entrée	2	Zestyk NC Output, N.C. Ausgang, N.C. Sortie, N.C.	3	Zestyk NO Output, N.O. Ausgang, N.O. Sortie, N.O.	Styk połączony z korpusem Connected to MBC enclosure Mit MBC Gehäuse verbunden Liason au boîtier MBC
---	---	---	--	---	--	---


Wymiary/ Dimensions/ Maße/ Dimensions

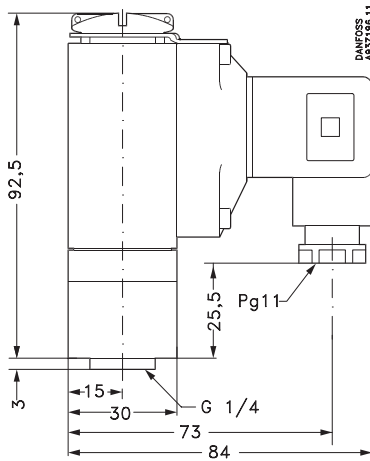


DANFOSS
A93Z196..11

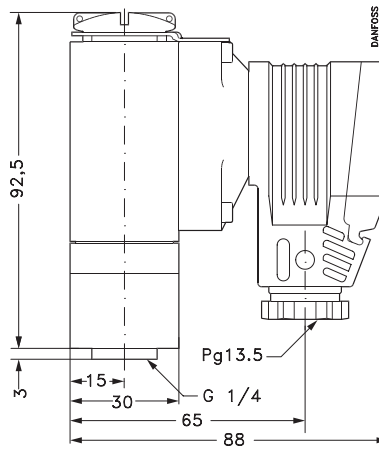


DANFOSS
A93Z197..11

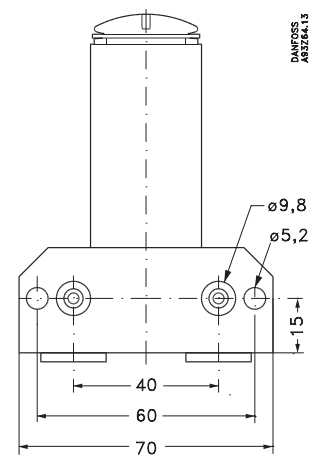

DANFOSS
A93Z194..13

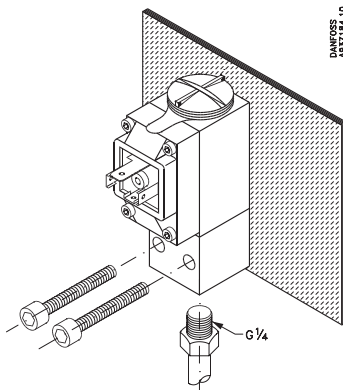


DANFOSS
A93Z184..10

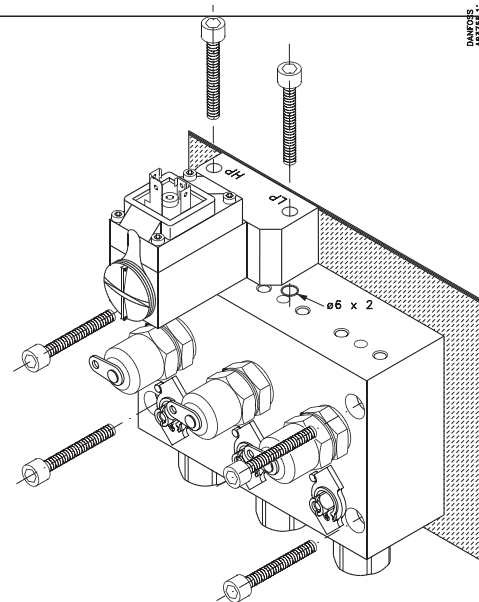

DANFOSS
A93Z187..11


Uwagi
Note
Achtung
Attention

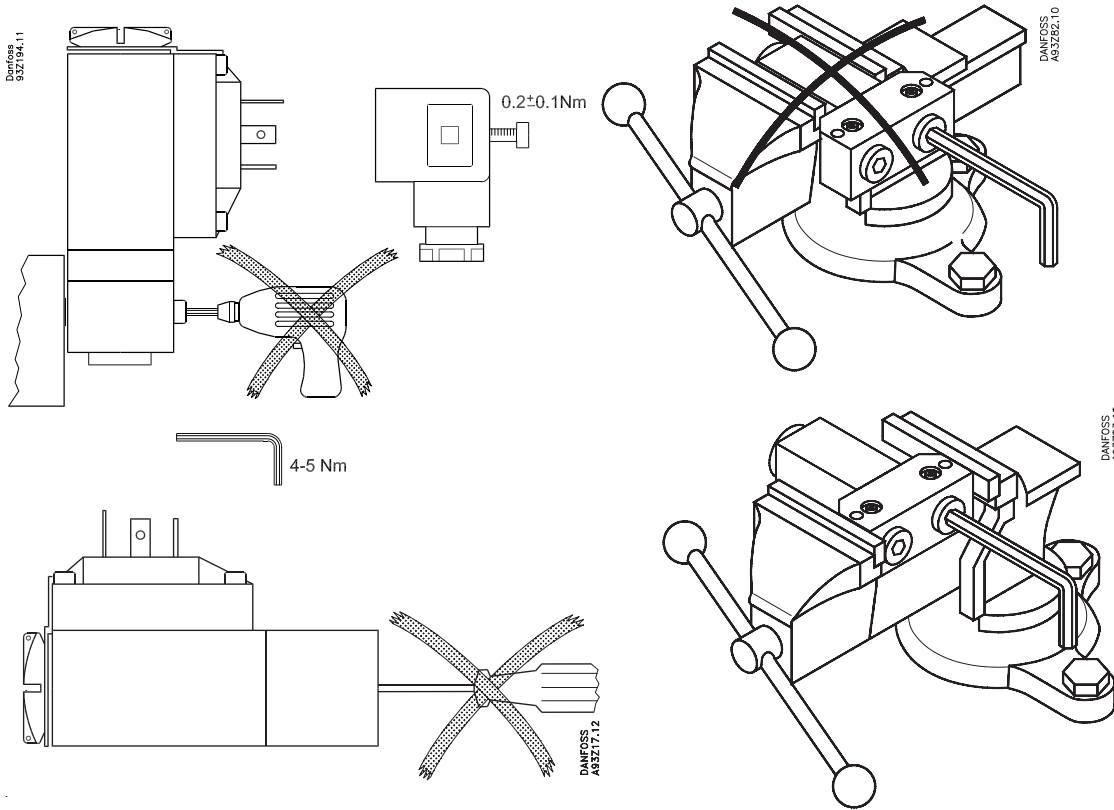


Temperatura otoczenia/medium
Operation temperatur
Betriebstemperatur
Température de fonctionnement

Nastawa
Adjustment
Justierung
Ajustage


Wersja z membraną:
Diaphragm version:
Membranen-Ausführung:
Modèle à membrane:
-10°C → +85°C

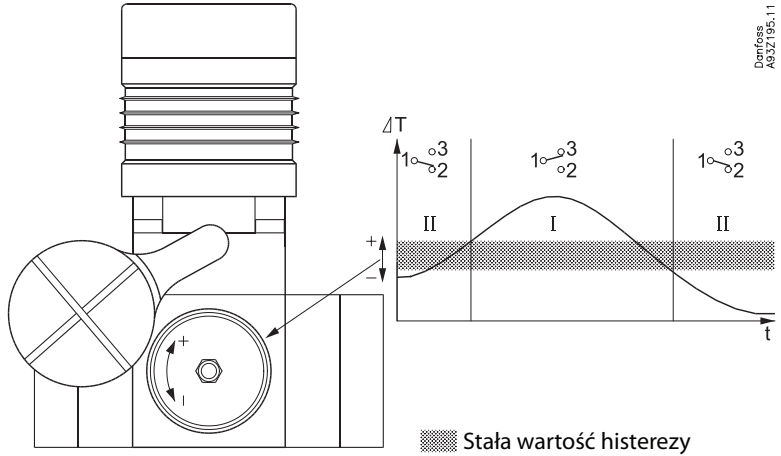


Urządzenia blokowe Danfoss/ Danfoss block components/ Danfoss-Komponente/ Danfoss gamme bloc

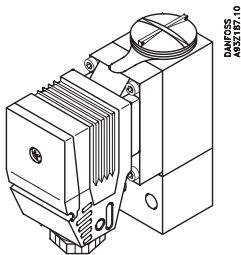


Presostaty
MBC 5000/5100

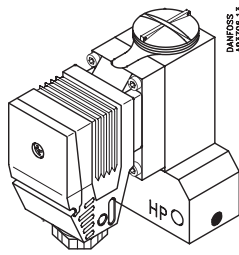

Presostaty różnicowe
MBC 5080/5180

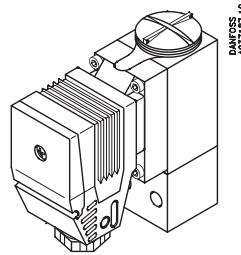

Przetworniki ciśnienia
MBS 5000/5100

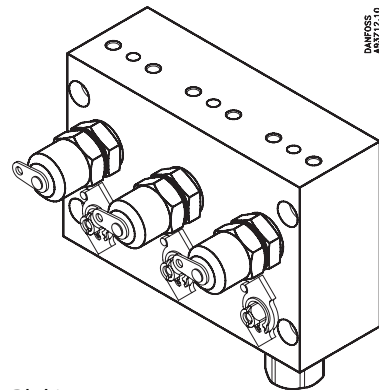

Bloki zaworowe
MBV 5000